

48A



48B



48C



48D



48E



48F



48G
L



48H
R



48I



48J

48A Centre console

48B Gear lever

48C Gear lever sheathing

48D Control lever base

48E Car radio with cassette player


48F Centre console panel

48G (L) Left vent grid


48H (R) Right vent grid

48I Left console cover


48J Right console cover

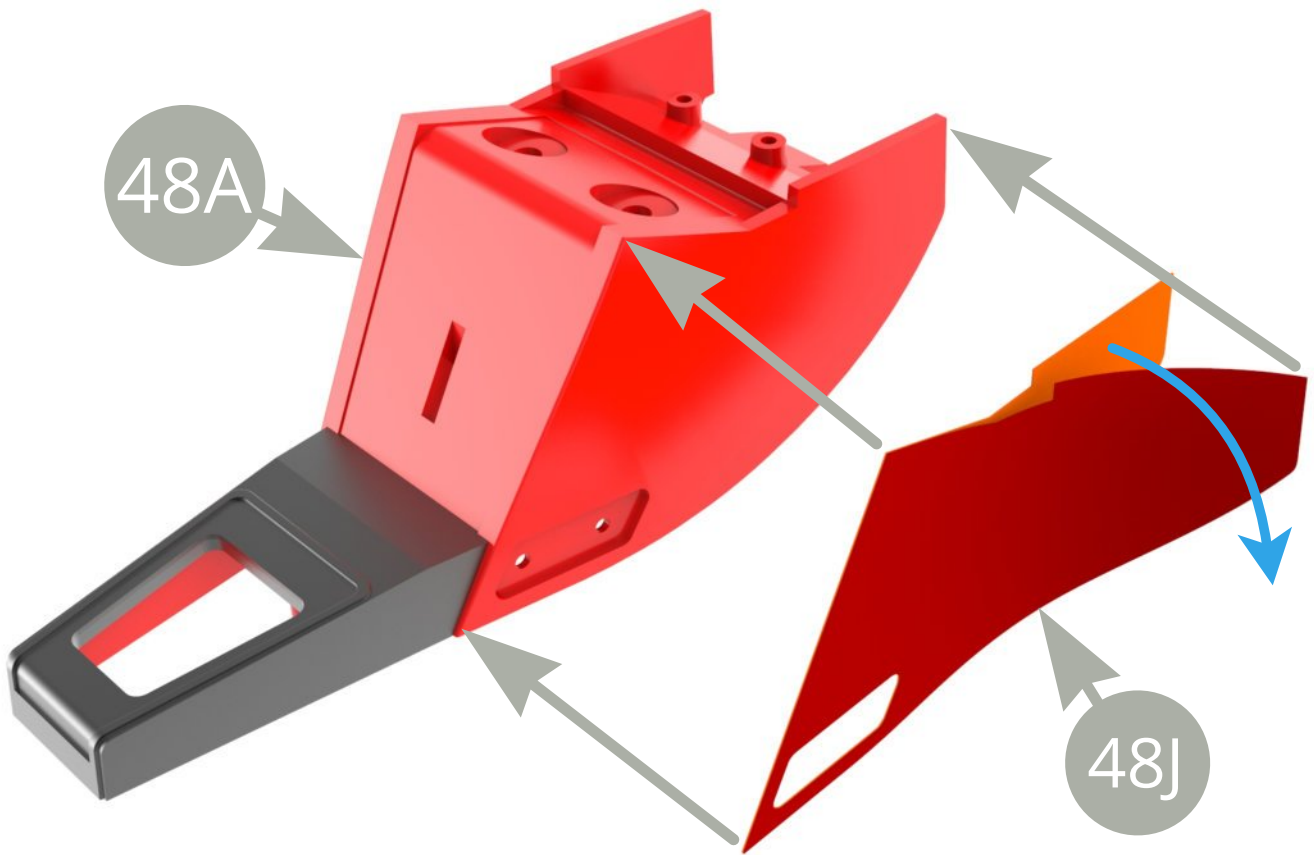


Peel **48J Right console cover** off its backing paper , apply and smooth on **48A Centre console** right side .

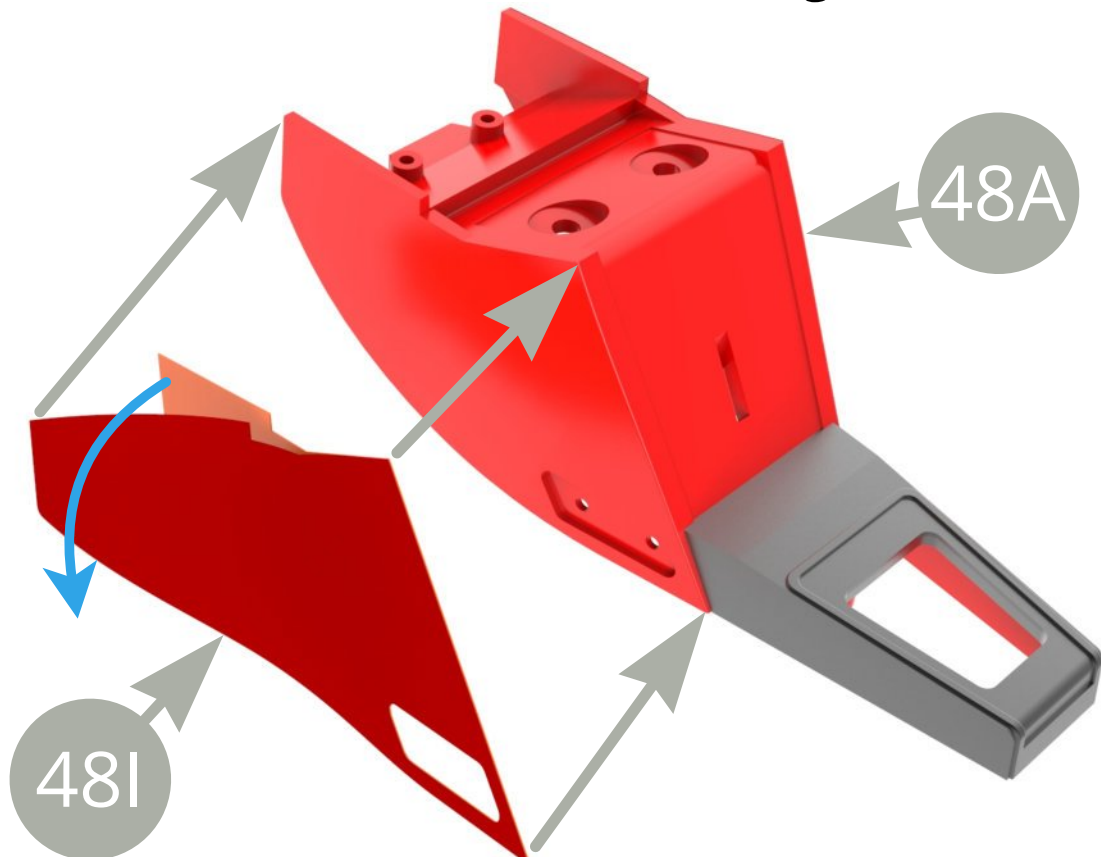


Peel **48I Left console cover** off its backing paper , apply and smooth on **48A Centre console** left side .

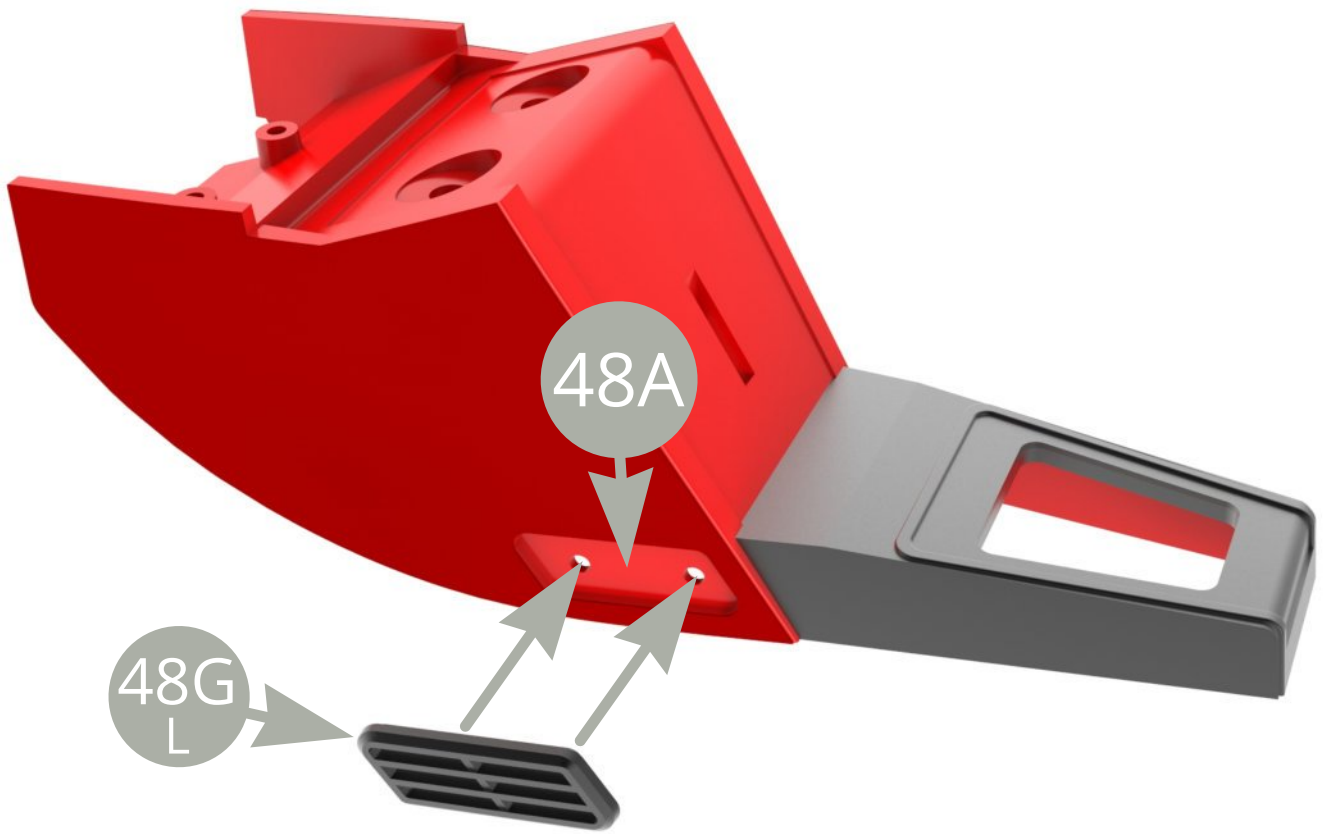


Fit **48G (L)** Left vent grid to **48A Centre console** left side .

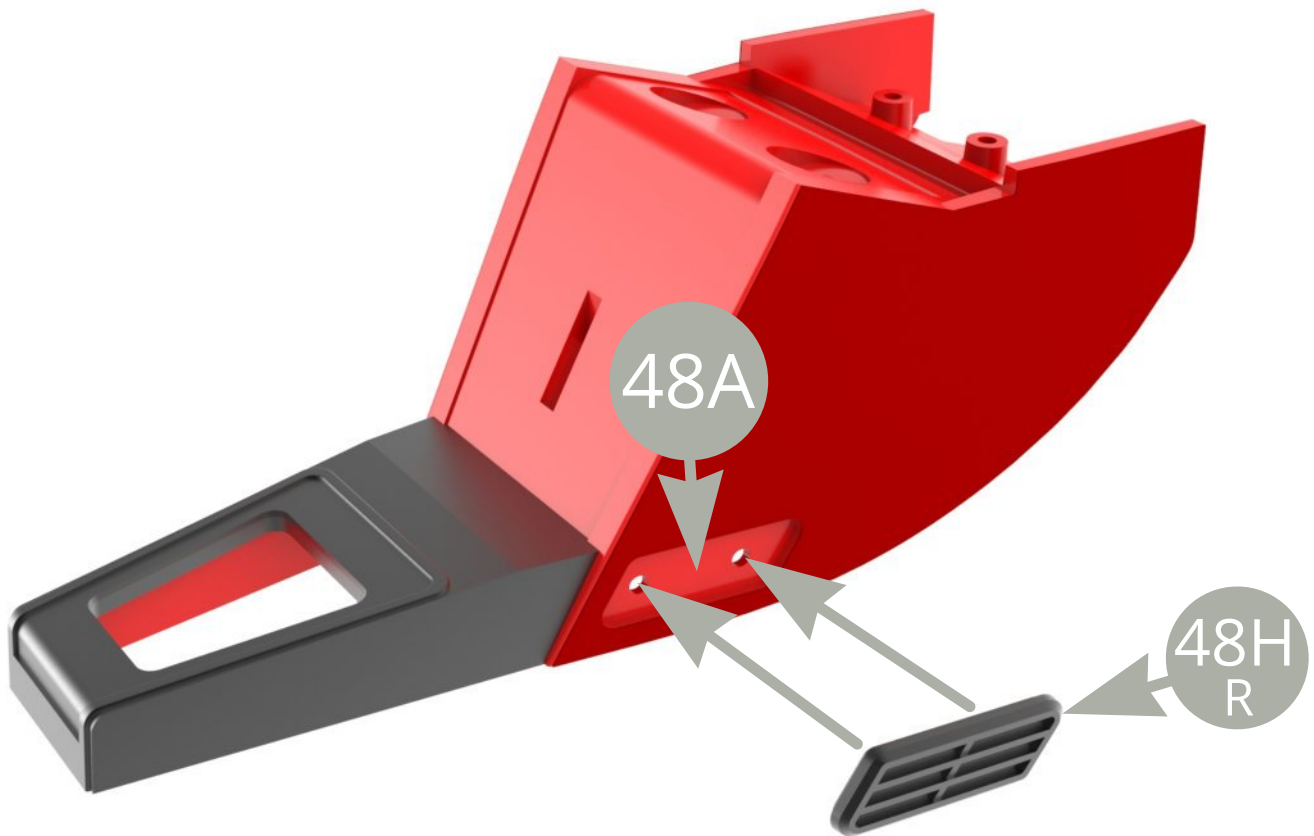


Fit **48H (R)** Right vent grid to **48A Centre console** right side .

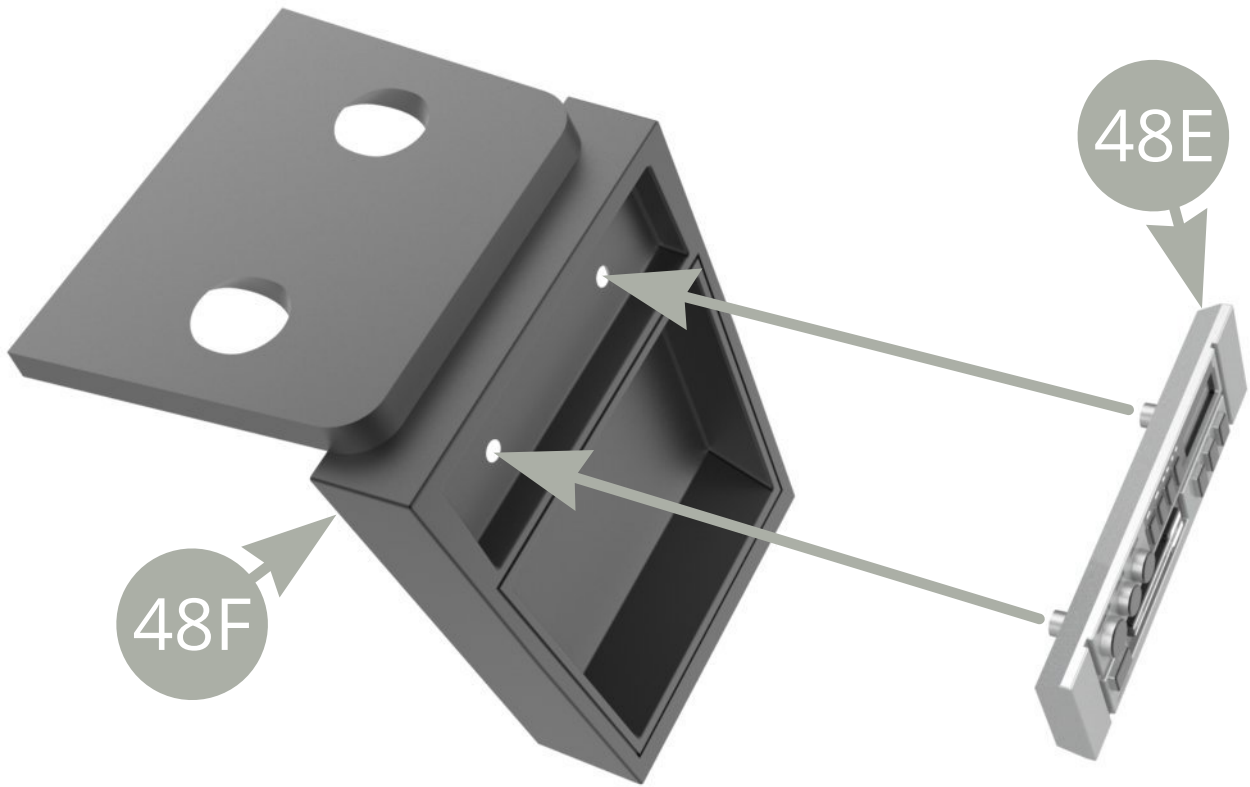


Fit **48E Car radio with cassette player** to **48F Centre console panel** .

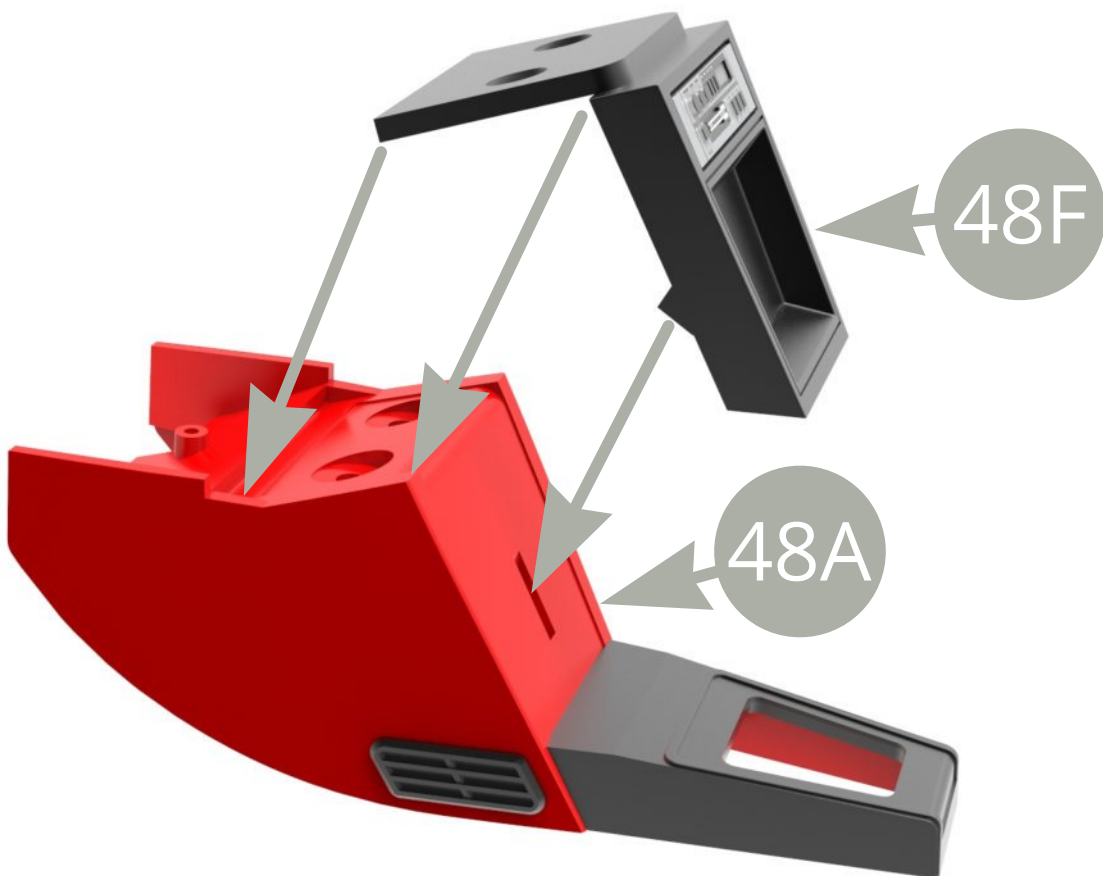

Fit **48F Centre console panel** to **48A Centre console** .

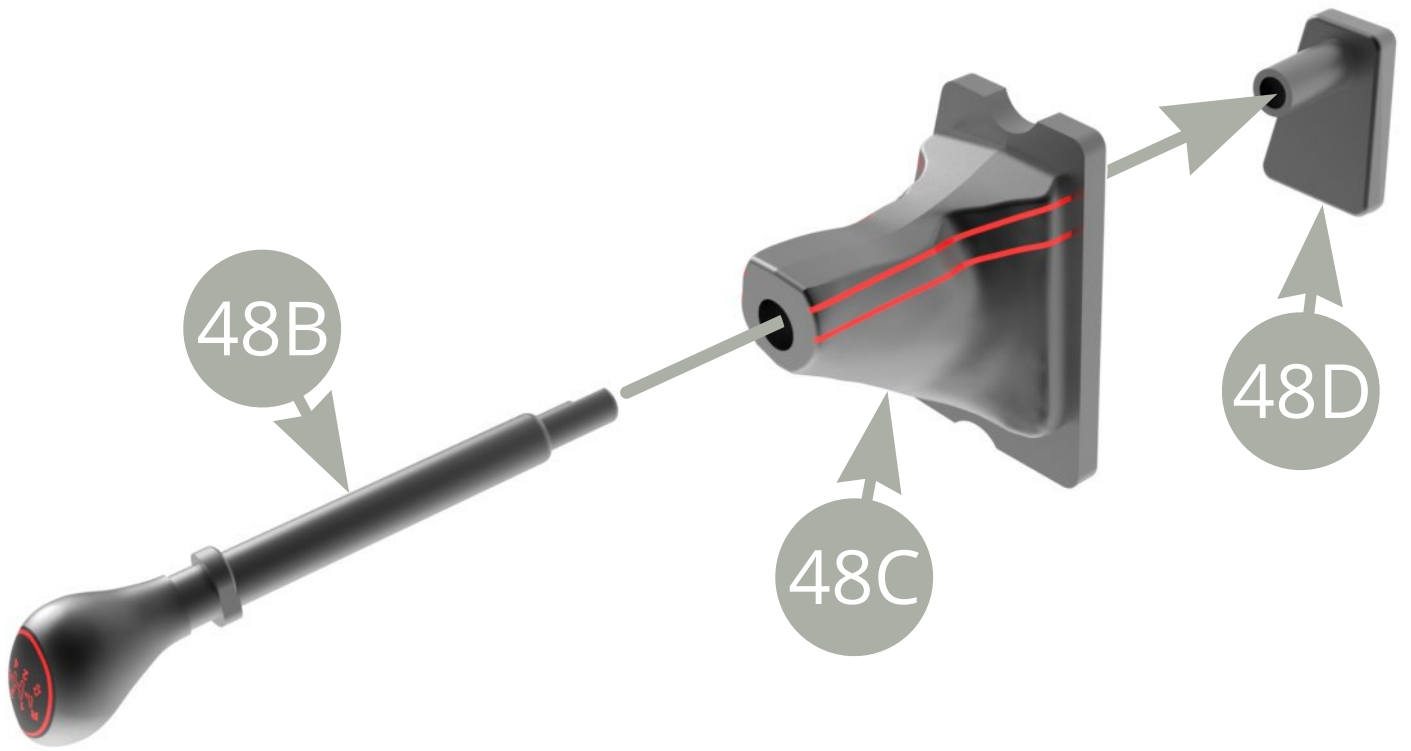

Fit **48B Gear lever** to **48D Gear lever base** through **48C Gear lever sheathing** in between .

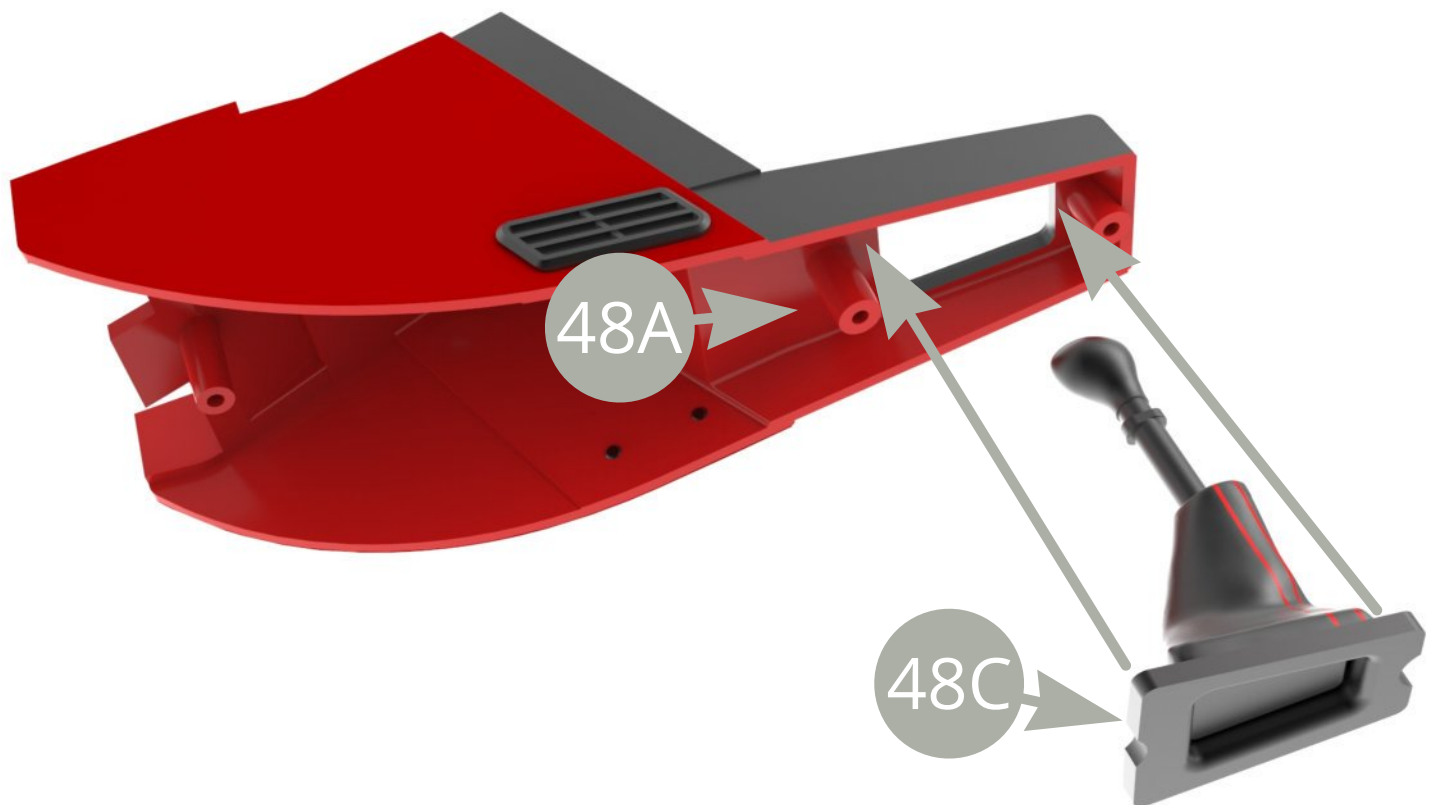

Fit **48C Gear leather sheathing** to **48A Centre console** .

Final views .



Assembly drawing .

