

1A



1B



SCREWDRIVER



AM



1C



1D

1A Bonnet


1B Bonnet reinforcement

1C Front grille


1D Peugeot emblem

Screwdriver

AM M1,7 x3mm (x8)

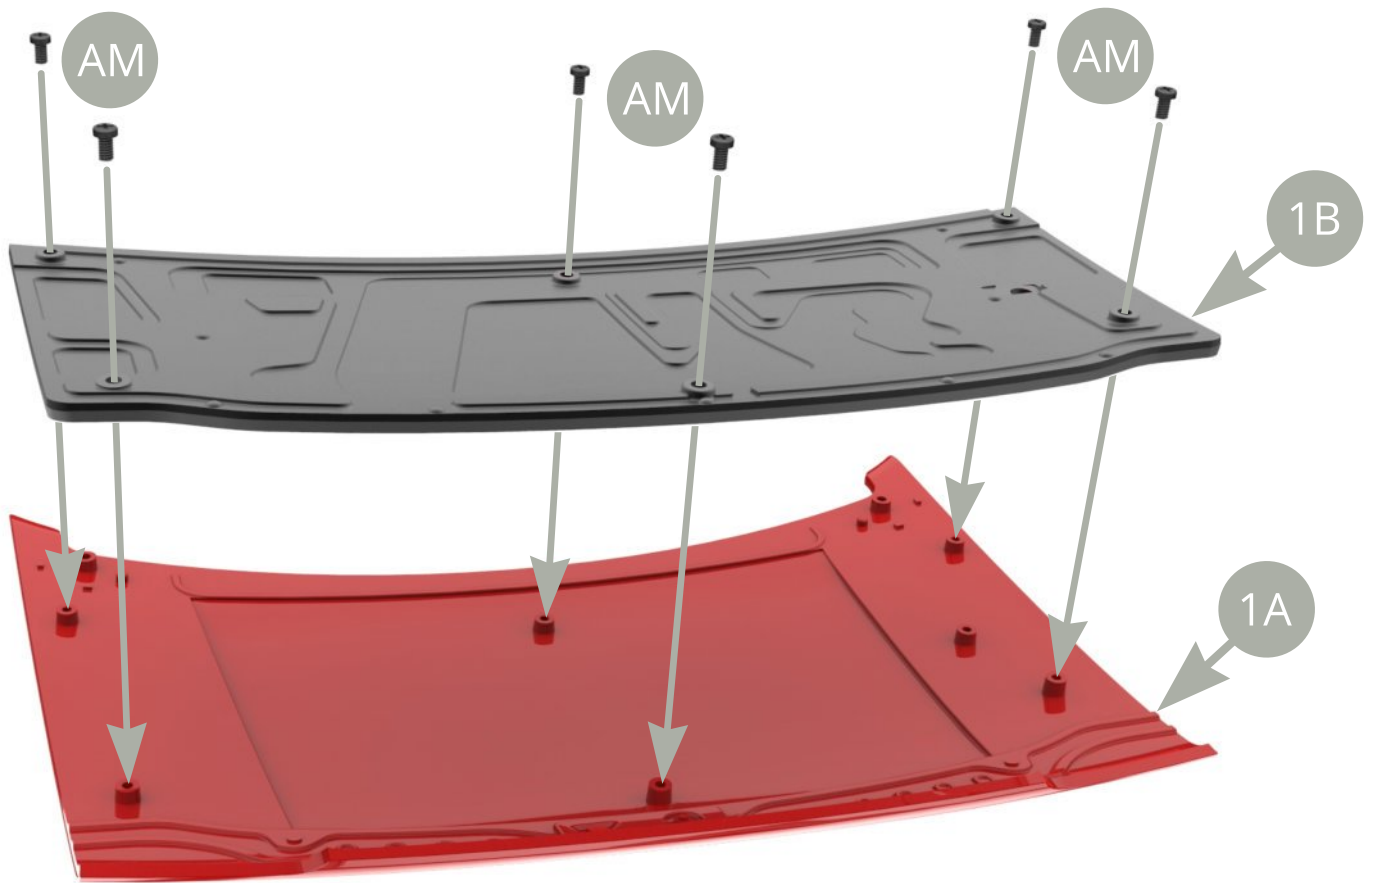


Fit **1B Bonnet reinforcement** to **1A Bonnet** and fix with six **AM screws** .

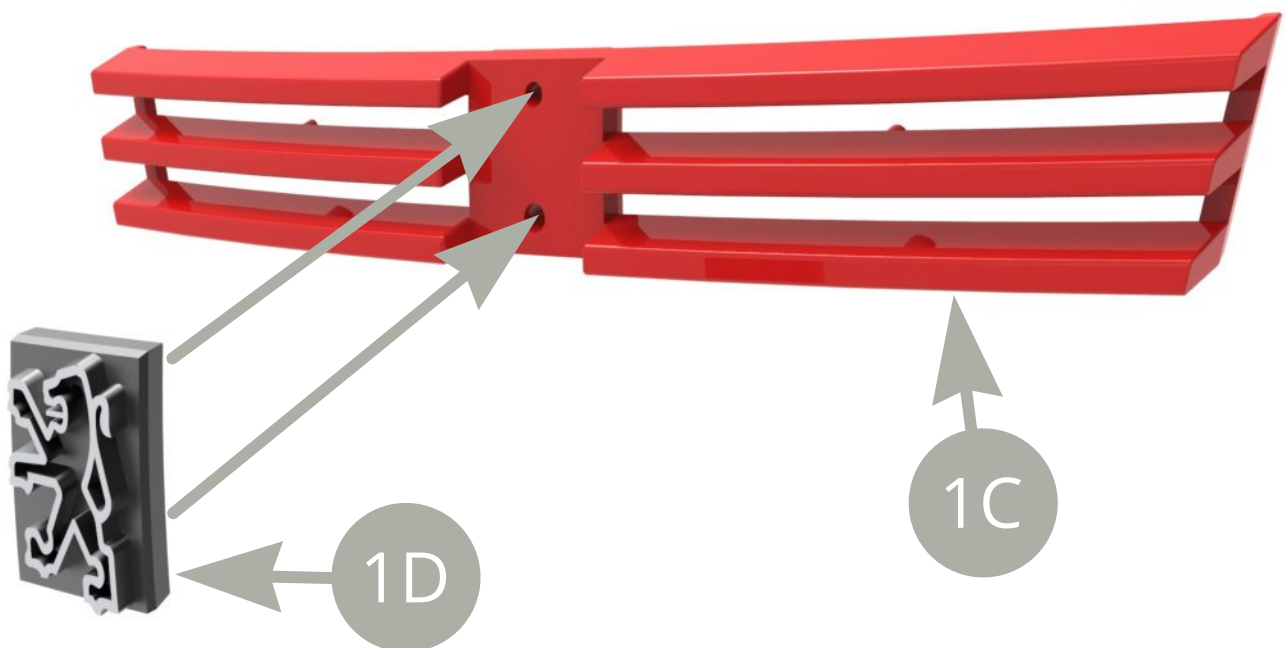

Fit **1D Peugeot emblem** to **1C Front grille** .

Final views

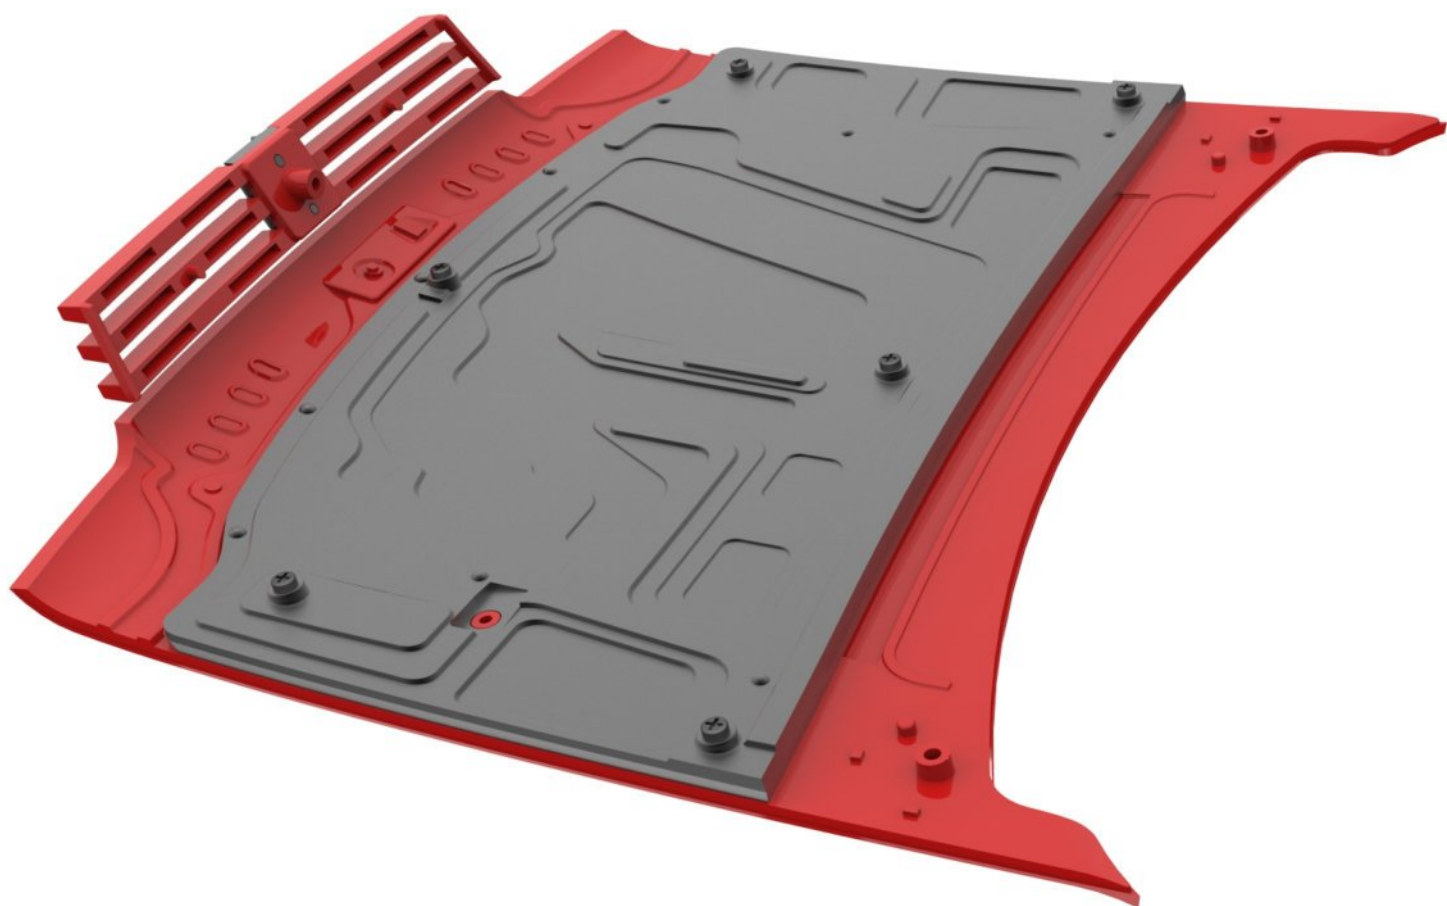

Assembly drawings

