


71A Front left wing

71B Front left arc cover


71C Molding

DP M1,7 x3mm (x4)


BM M2,0 x4mm (x7)

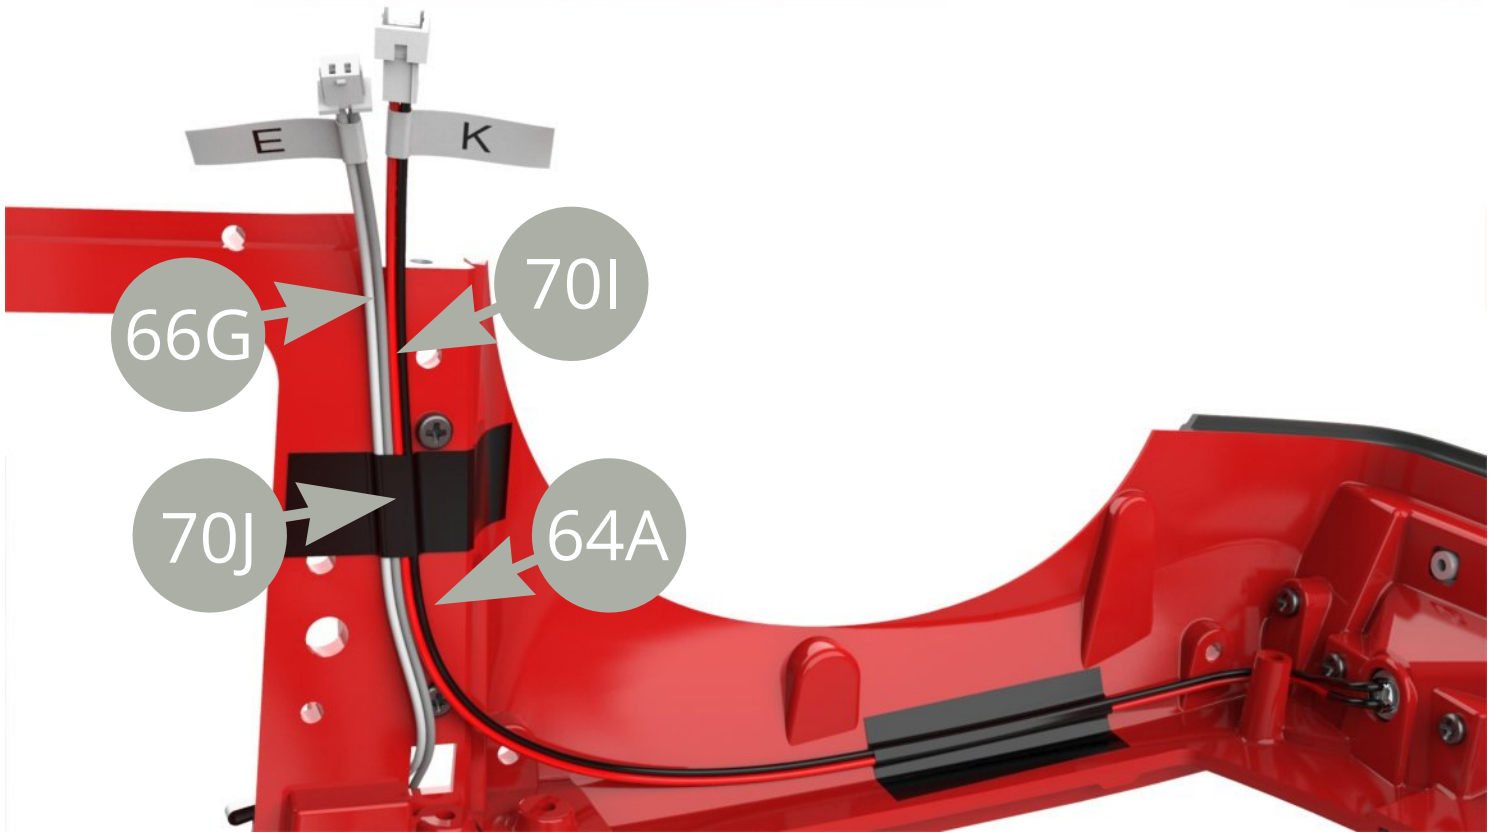


Fix **70I Headlight cable K** and **66G Saloon light cable E** to right inner wall of **64A Body frame** with **70J Tape** .

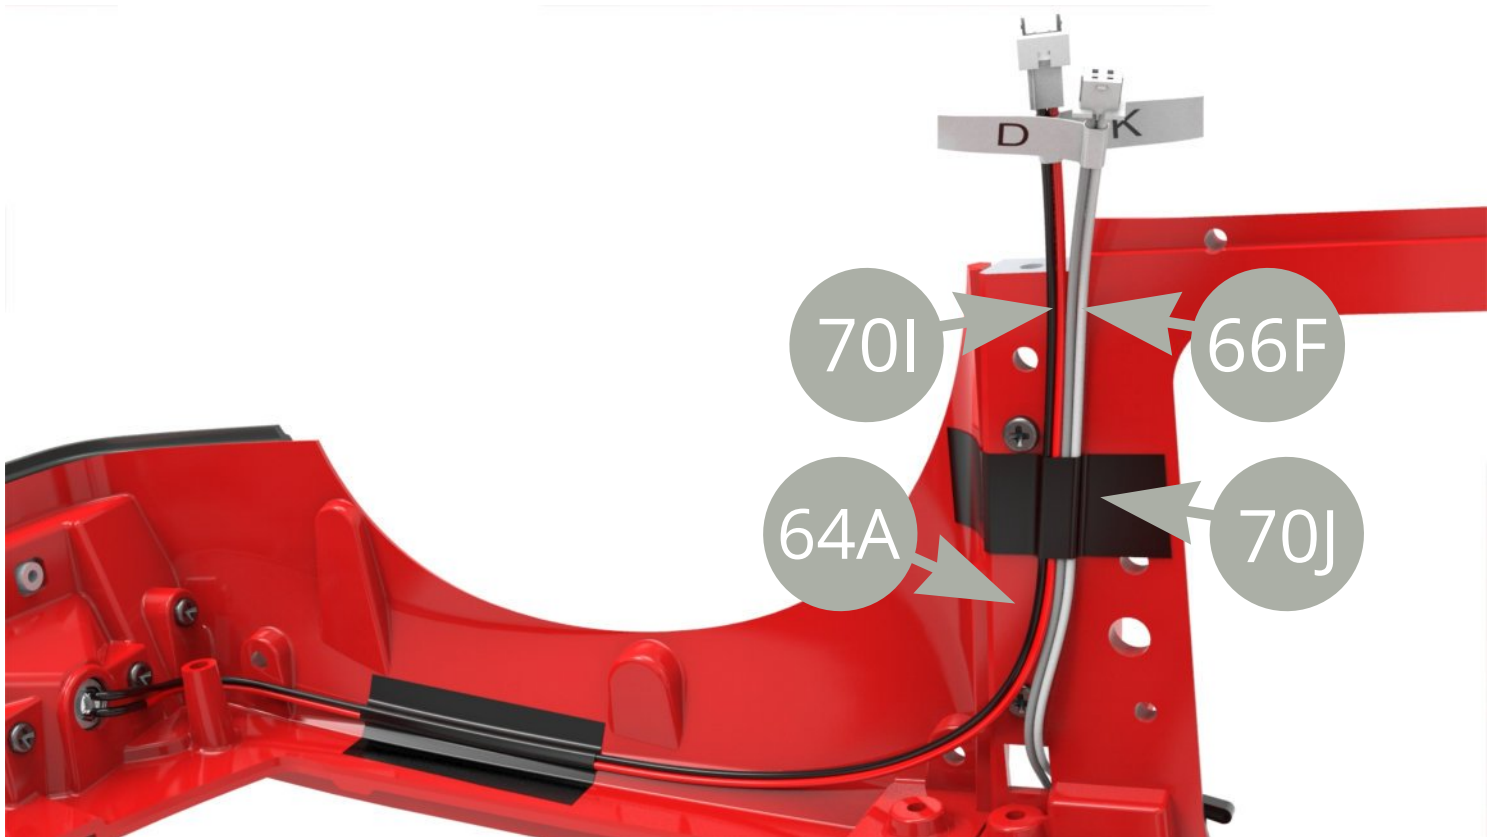


Fix **70I Headlight cable K** and **66F Saloon light cable D** to left inner wall of **64A Body frame** with **70J Tape** .

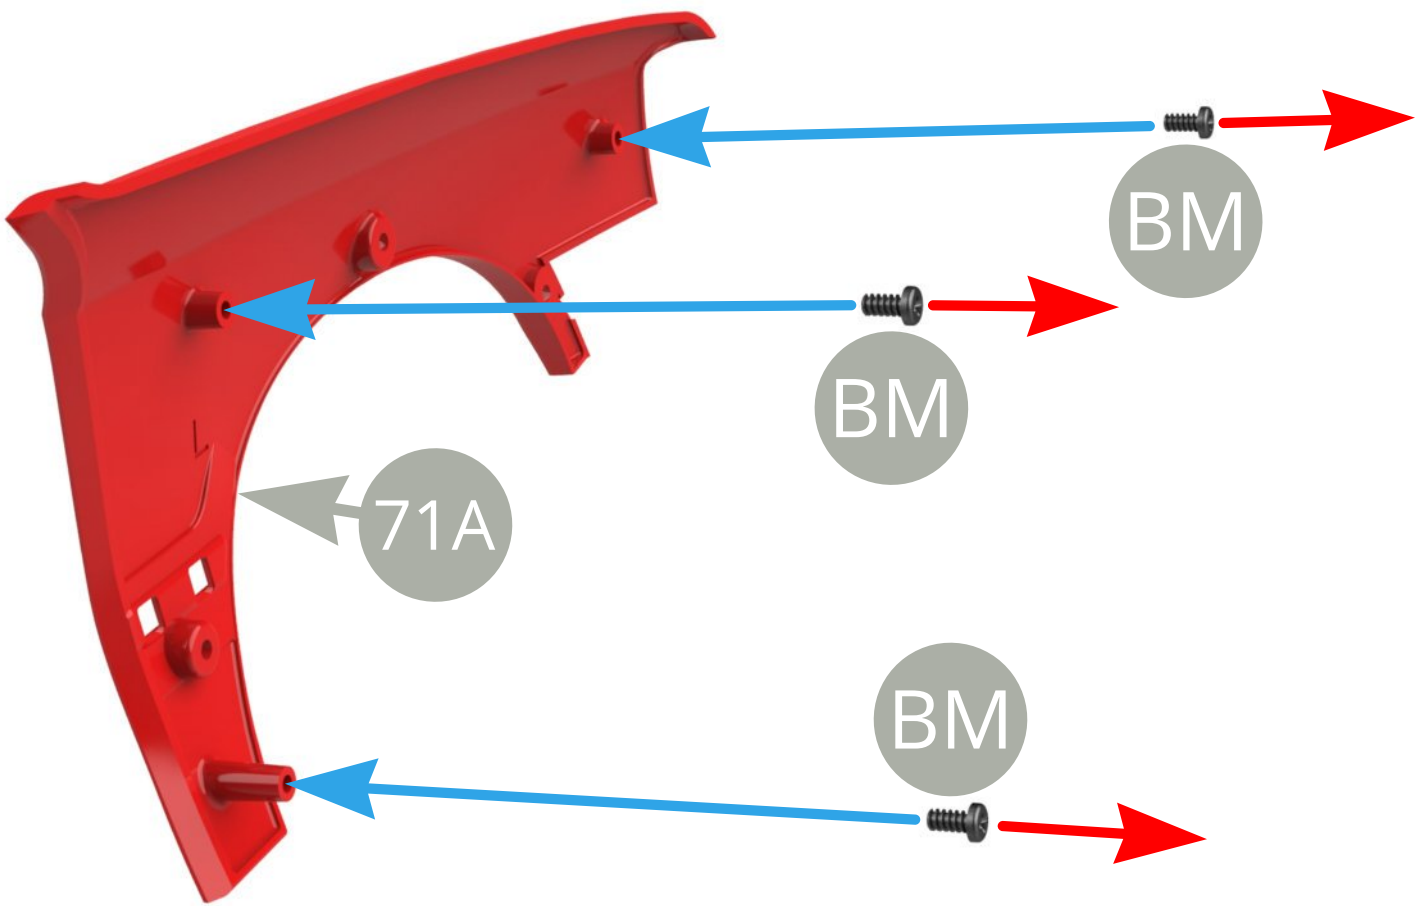

To facilitate further assembly cut the threads by taking three **BM screws** and screwing them in (**blue arrows**) **71A Front left wing** , and then unscrewing completely (**red arrows**).

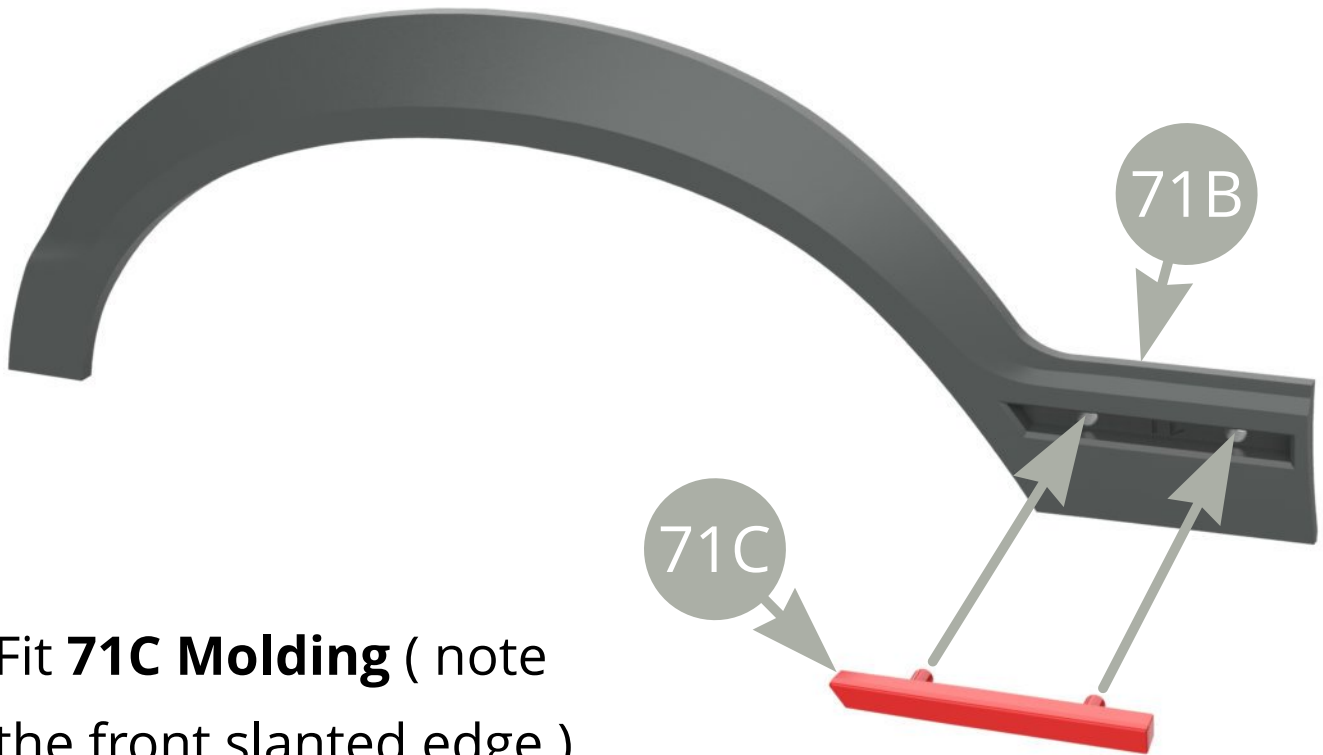


Fit **71C Molding** (note the front slanted edge) to **71B Front left arc cover** .

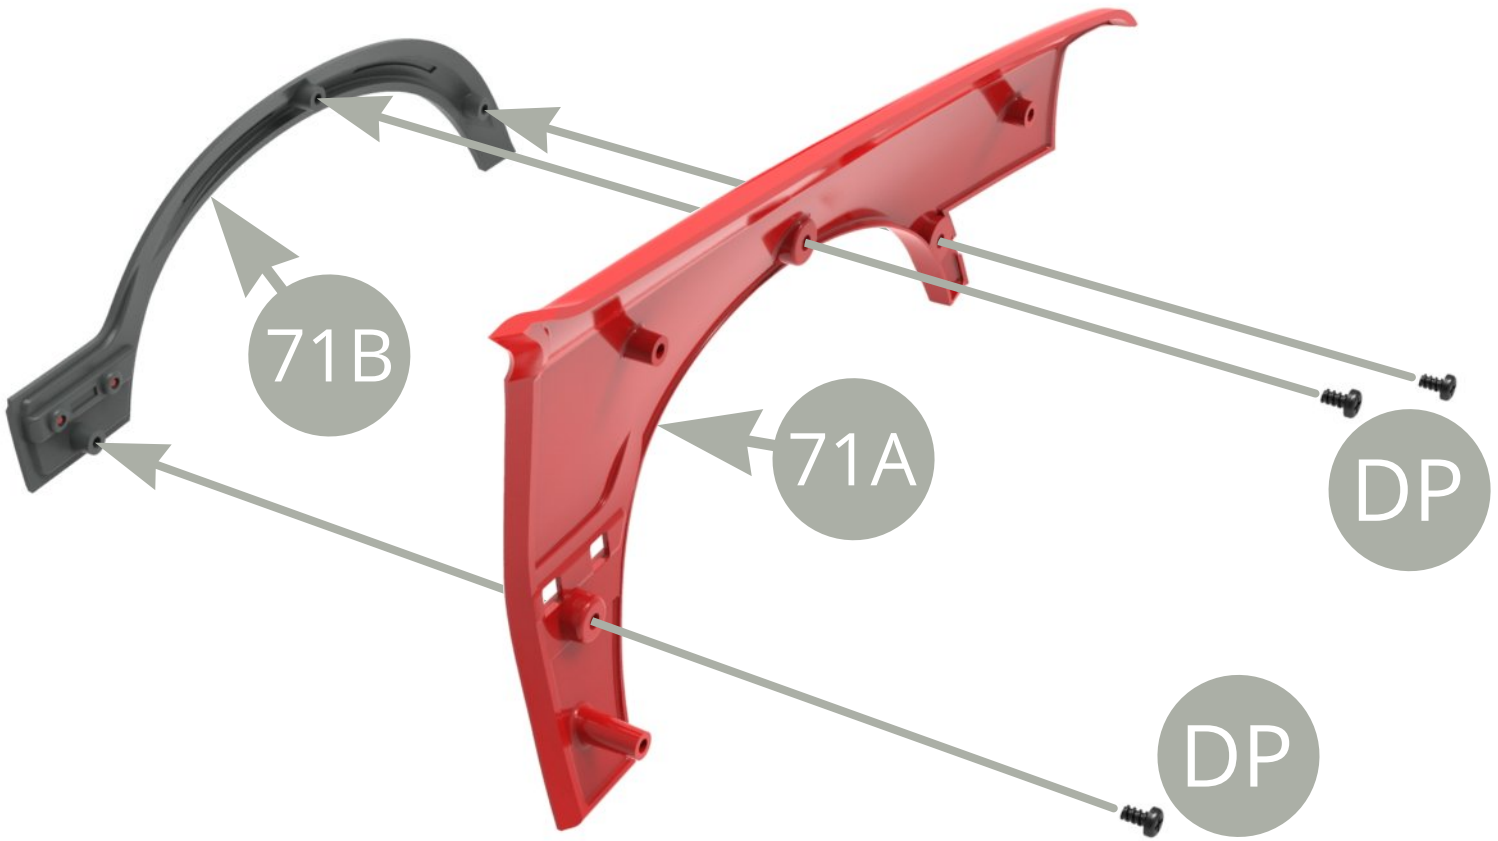

Fit **71B Front left arc cover** to **71A Front left wing** and fix with three **DP screws** .



Fit **71A Front left wing** to **68A Front subframe** left side and fix with three **BM screws** (upper and lower illustrations) .

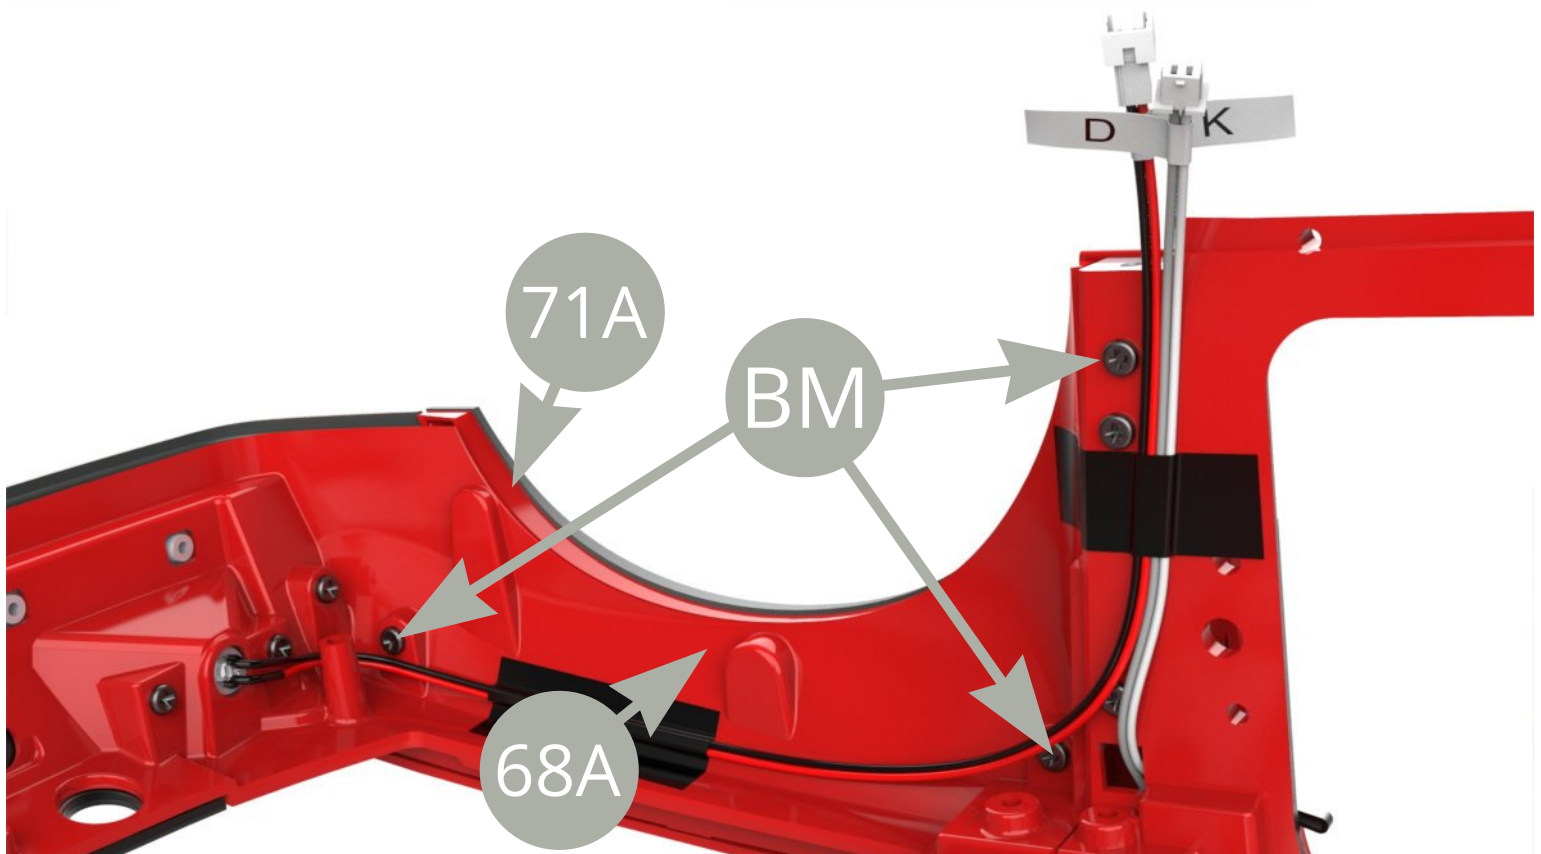

Final views .



Assembly drawings .

