



72A Front right wing
72B Front right arc cover
72C Molding

DP M1,7 x3mm (x4)
BM M2,0 x4mm (x7)

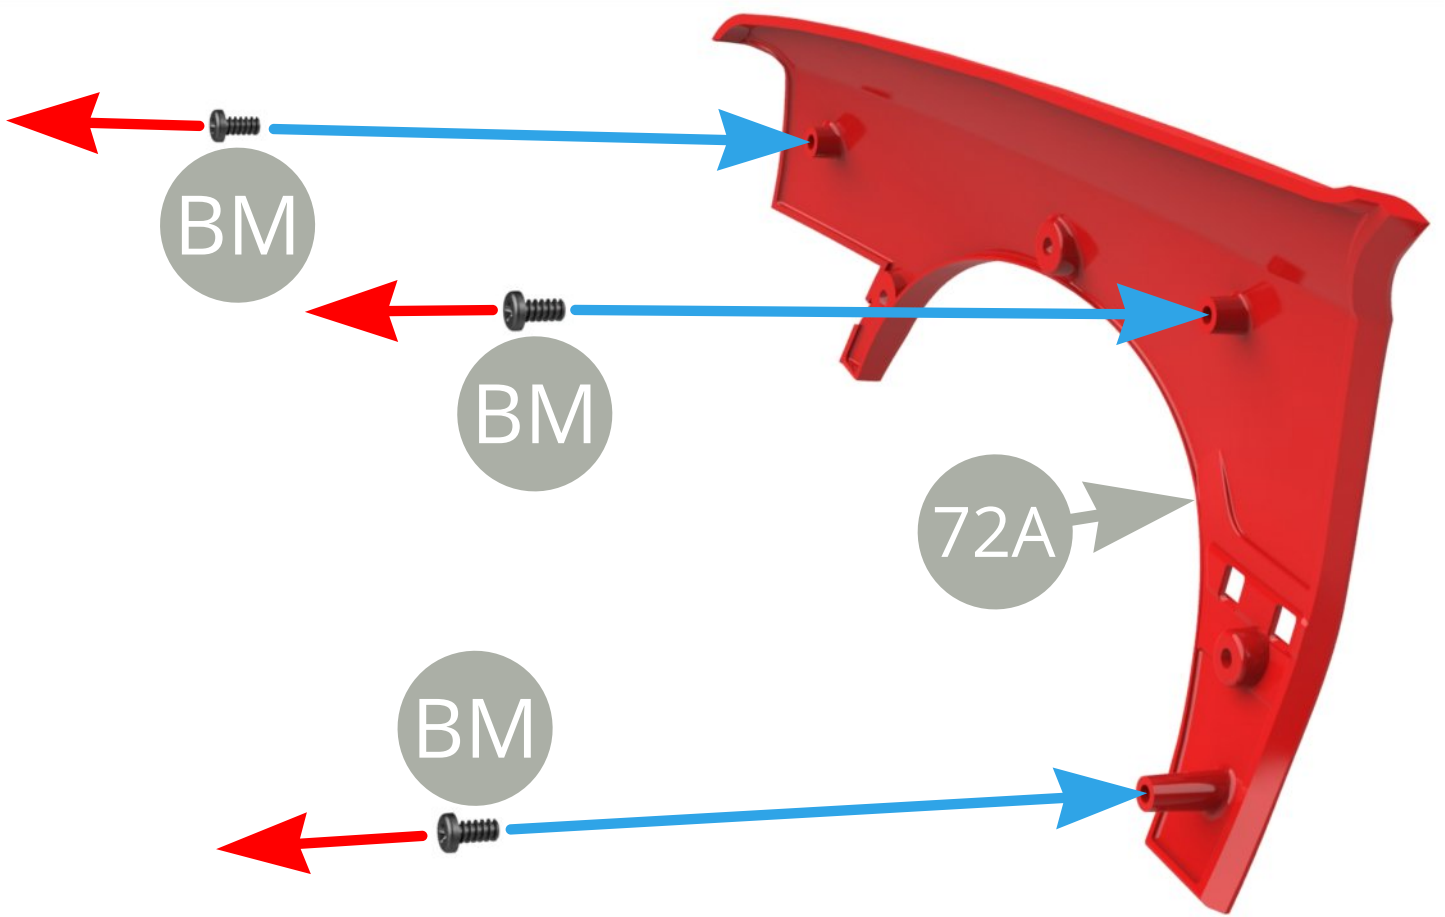

To facilitate further assembly cut the threads by taking three **BM screws** and screwing them in (**blue arrows**) **72A Front right wing** , and then unscrewing completely (**red arrows**) .

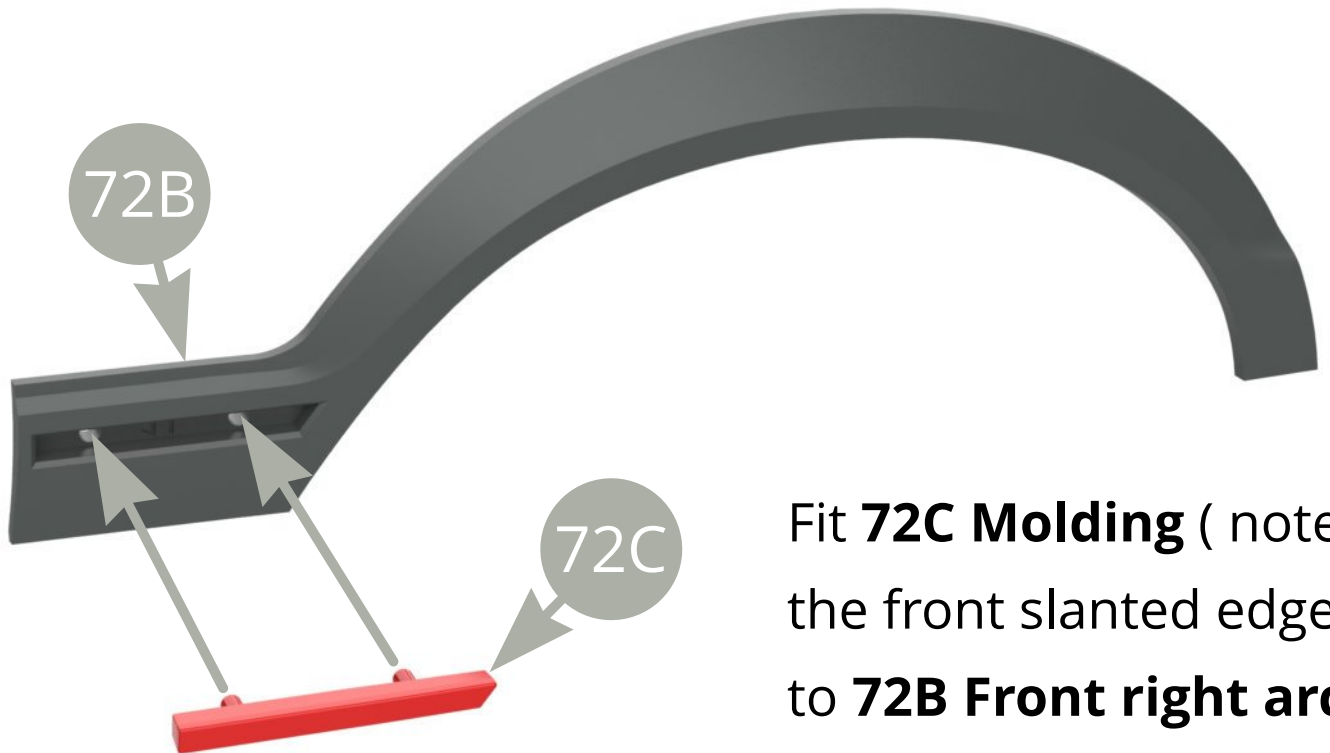


Fit **72C Molding** (note the front slanted edge) to **72B Front right arc cover** .




Fit **72B Front right arc cover** to **72A Front right wing** and fix with three **DP screws** .



Fit **72A Front right wing** to **68A Front subframe** right side and fix with three **BM screws** (upper and lower illustrations) .

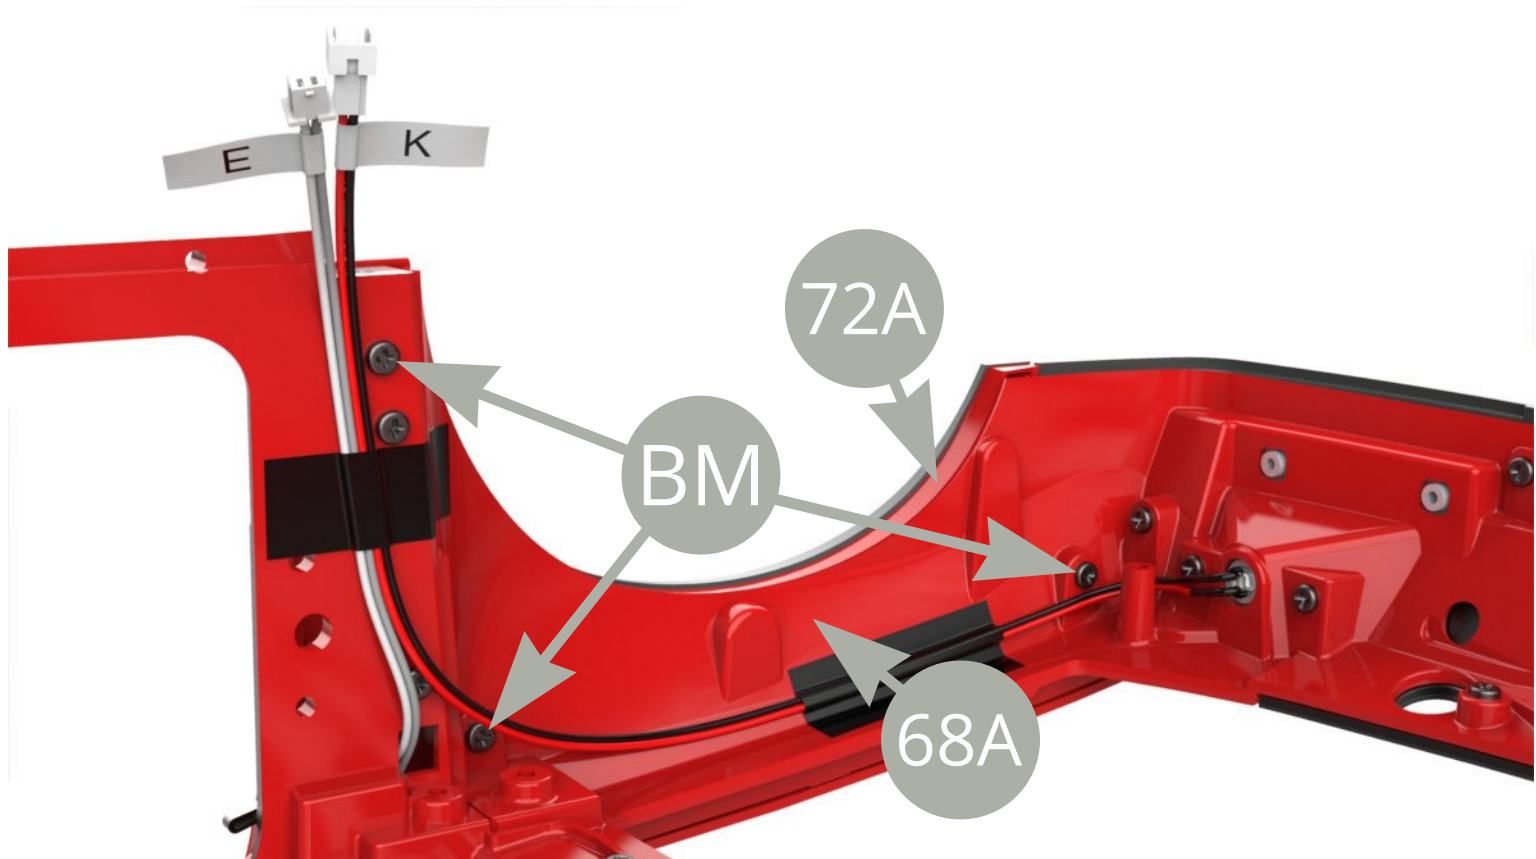

Final views .

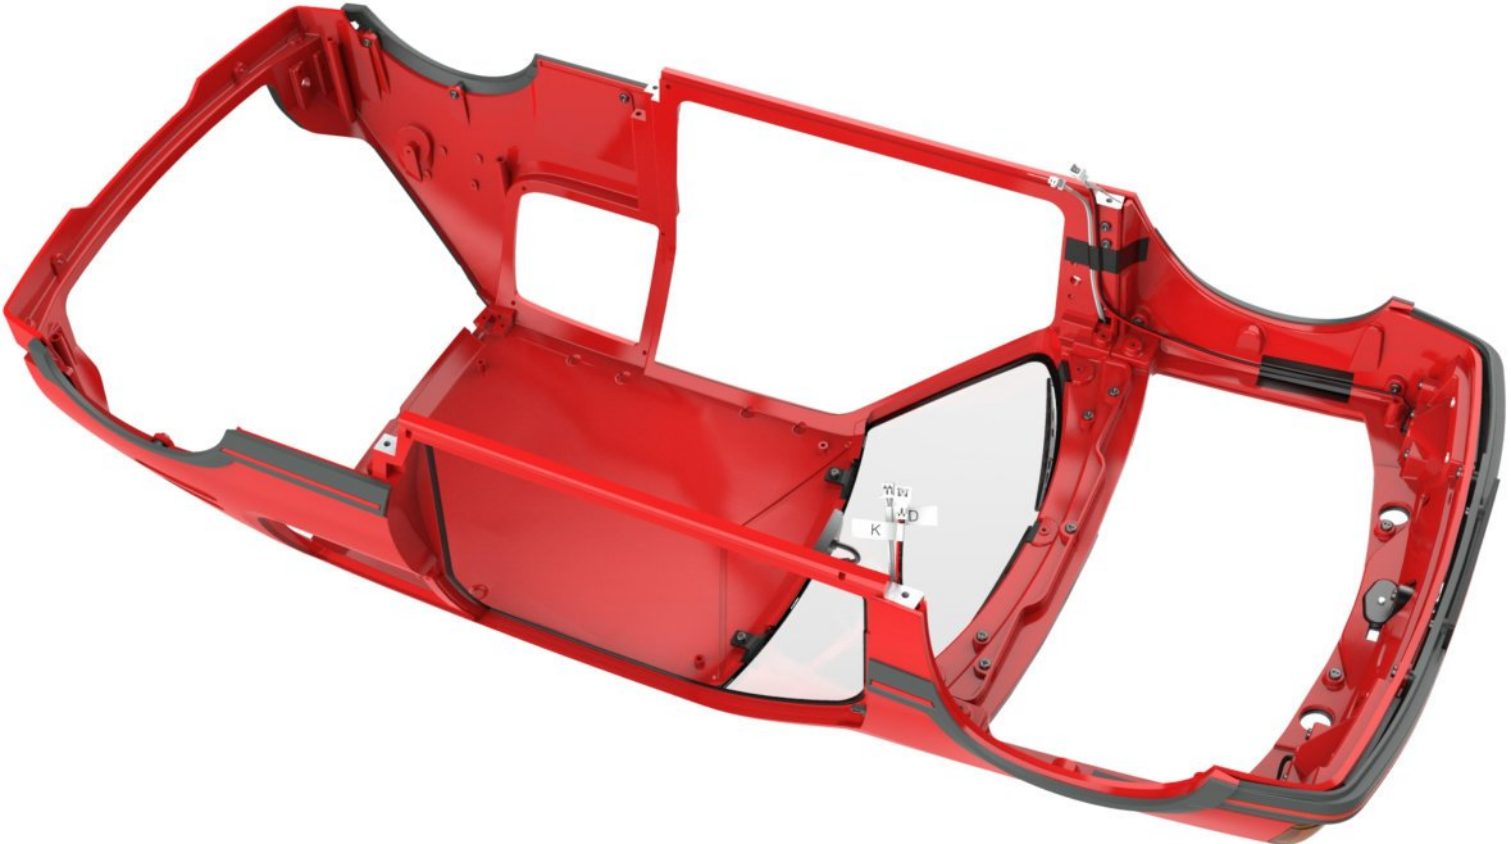

Assembly drawings .

